

# ELECTRONIC ULTRASONIC REPELLER

Art.No. 35 718

## INSTRUCTION MANUAL

### USER INSTRUCTION AND MAINTENANCE

Congratulations on purchasing this product in the quality. Please read the manual carefully to take full use of the device and avoid the operating mistakes. Keep it well for future users and make sure to return it to the people to whom you consign this product.



The Ultrasonic Repeller is easy to use. Simply install 6 "C" Battery and then place the unit in your garden, with an unobstructed view of the area you want to protect. There are two adjustable button for distance and frequency choice for different kind of animal detecting. The built-in motion sensor detects the animals entering the area and emits a piercing, high-decibel alarm that startles the cat and frightens it away. Since the sound is ultrasonic, you and your neighbors cannot hear it.

### The Ultrasonic is an effective animals deterrent for several reasons

- a powerful burst of ultrasonic sound startles the animals
- the animals equate the location with the unpleasant occurrence
- the cat avoids the location in the future
- unlike pest deterrents that operate continuously, the Ultrasonic unit waits for the animal to come into its range before activating, making the function unpredictable for the animal, and therefore more effective.

### Specifications

The Ultrasonic Repeller automatic outdoor animal deterrent is constructed of durable, weather-resistant materials, and has been designed to provide many years of reliable service.

### Technical Specifications

- Infrared sensing angle: 80 degrees.

- Detection range: 6-7 Metres, depend on body size of animal, the bigger, the more far distance sensing.
- Battery life: up to 2,000 activations (10 per day = 200 days).
- Sensor warm-up time: 60 seconds.
- Power supply: nine-volt alkaline battery (6 "C" batteries)
- Red LED: indicates when the unit is activated.
- Unit on time when activated: three seconds.
- Output frequency: sweeping from 10-50 KHZ.
- water resistant
- includes one stake for versatile mounting (ground level, approximately 4" above ground).
- Left top button: Sensitivity adjustable, sense distance become longer while button goes to clockwise direction. For small animal detect, the button shall place in right limited position.
- Left bottom button: Ultrasonic frequency adjustable. The bigger on the frequency value while button goes clockwise direction.
- Animal type
  - Small animal: Blackbeetle, Mice, Flea, Squirrel etc.
  - Middle animal: Dog, Cat, Wolve etc.
  - Big animal: Boar, Tiger, Panther, Elephant etc.

## SET UP

### To set up the Ultrasonic Repeller

1. Remove the battery door (being careful not to press on the lens or speaker). Install 6 "C" alkaline battery, and then close the battery door. If you do not want to use batteries. After 60 seconds, the Ultrasonic Repeller is ready. The red light stays on for 2 seconds indicating that the unit has been triggered. (If this light does not come on, replace the battery with a new one.)

**NOTE:** Please make sure the gasket is well fixed in the battery compartment before closing battery door.

2. Position the Ultrasonic Repeller (for example, in the flowerbed, or against the wall) pointed towards the area that you want to protect.

3. If mounting the unit in the ground, push the Ultrasonic mounting stake into the soil, and attach the Ultrasonic Repeller.

4. If mounting on a wall, use the template provided to locate the position of the screw holes. (Note: Maximum mounting height is 12" or 30.48 cm) Drive in the screws, leaving a 1/4" (4mm) gap. Line up the screw heads with the keyholes in the Repeller, and hang the unit repeller on the screw heads.

### DISPOSAL

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
 Elisabeth-Selbert-Straße 3  
 40764 Langenfeld, Germany

**EURO**  
*tops*

If technical support is needed, please call ...

in Germany 0180 . 530 63 63\* or [info@eurotops.de](mailto:info@eurotops.de)

in Austria 01 . 230 60 43 12 or [info@eurotops.at](mailto:info@eurotops.at)

in Switzerland 044 . 28 36 125 or [info@eurotops.ch](mailto:info@eurotops.ch)

in the Netherlands 026 . 37 36 333 or [info@eurotops.nl](mailto:info@eurotops.nl)

in France 0892 . 700 470\*\* or [info@eurotops.fr](mailto:info@eurotops.fr)

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 24.05.2013